



When sewing heavy weight materials feed can be improved by depressing the bottom of the presser fcot, making it parallel to the throat plate. This makes it easy to start sewing multiple layers of fabric or overlapped materials.





The front drop-in bobbin is easy to view and replace with no separate bobbin case to lose or fuss with. The window in the hook cover allows you to monitor the remainding bobbin thread.





As the needle stops at the lowest position, you can easily turn the material and begin to sew. By pushing the Reverse Stitch Button, the needle will go up and you can remove the material safely and effectively.



Plastic Hard Case


HZL-E61

 


■ SPECIFICATIONS

Sewing Speed	Max. 900r.p.m
Stitch Length	Max. 4mm
Zigzag Width	Max. 7mm
Lift of the presser foot	2 steps lifter Max. 12mm
Needle	HAX1(130/705H)#9~#16
Dimensions	410(W)×300(H)×180(D)mm
Weight (machine only)	7.3kg



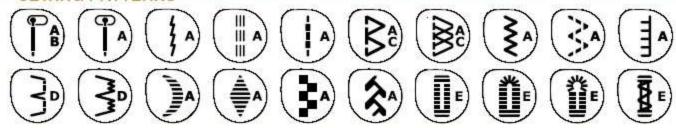



To ensure proper and safe use of the machine, be sure to carefully read the "Instruction Manual" before operating the unit.




JUKI CORPORATION Household Sewing Machine Division 8-2-1 Kokuryo-cho,Chofu-shi,Tokyo 182-8655, Japan TEL:81-3-3480-5034 FAX:81-3-3480-5037

http://www.jukl.co.jp E-mail:hsm@jukl.co.jp

JUKI CORPORATION holds the rights to



Just One Touch! Easy to select your desired sewing pattern.

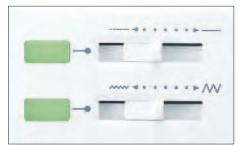

Stitch length and zigzag width can be easily changed to your preferred size by push button and adjustment lever. You can return to the standard settings by simply pushing the one touch manual buttons.



Auto Needle Threader




The automatic needle threader easily threads the needle without eyestrain and allows you to start sewing quickly.

Automatic Buttonholing



With 3 buttonhole patterns to choose from, the machine conveniently sewing buttonholes automatically according to the size of the button. At the end of sewing, the unit automatically stops after bar tacking. According to your project, you can sew thin to thick buttonholes with ease on any type of fabric.


Direct Pattern Selection

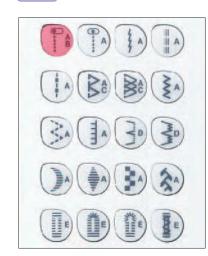

With one touch a sewing pattern can be selected by simply depressing a button. The pattern selection key illuminates when selected so that the sewing mode is always



Two Automatic Lock Stitch Keys

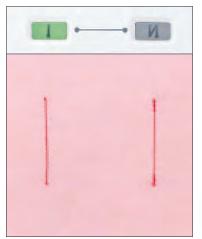

Push button selection of two

different lock stitches to secure your sewing.

Reinforcement Stitch

The needle enters at the same position both at the beginning and end of sewing creating a reinforcement stitch that prevents stitches from fraying or unraveling.

Reverse Stitch

machine automatically performs reverse stitching at the beginning and end of sewing

Thread Tension

Determining the correct thread tension for the material you are sewing is easy with the conveniently located thread tension dial.





The presser foot lift raises in 2 steps with a maximum lift range of 12mm. Even heavy weight materials are easily handled in and out of the sewing area.

Drop Feed



You can lower the feed dog for free-motion quilting or raise it for normal sewing by simply moving the lever to the right or left.





Located in front of the needle entry hole, it enables you to start sewing smoothly and effortlessly.

